

SERVICE BULLETIN #143 May 26, 1998


-Engineering Department-

- TO ALL MiTek® Cyber Saw® USERS:

To prevent damage to electrical/electronic components with presence of saw dust we are issuing the following instructions:

1. Keep all **Cyber Saws®** electrical cabinet doors closed when operating the saw.
2. Remove and clean filter (**MiTek®** P.N. 504480) with compressed air weekly.
3. Set thermostat fan no lower than 100° F.

Filters are located as follows:

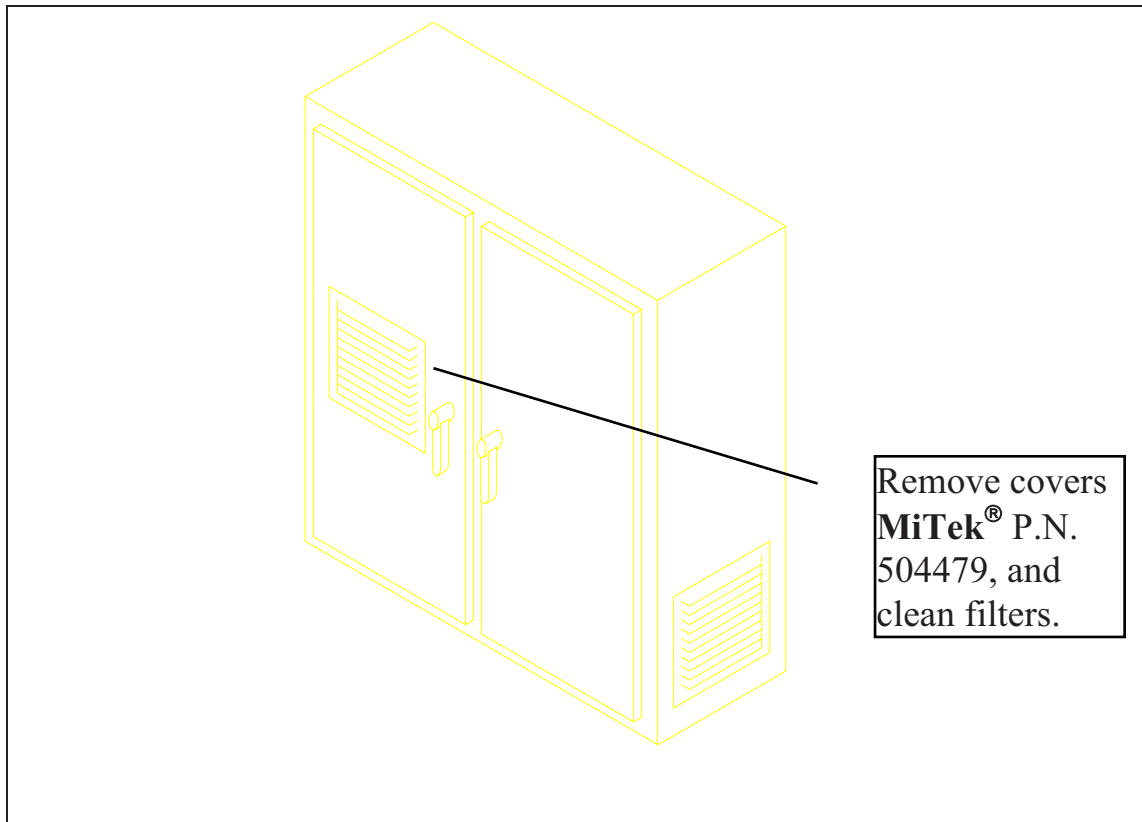

Stationary and Carriage Enclosures

- Clean filter thoroughly and place back into position. (Do not operate the saw without the filters in place).